

## Often Imitated, But Never Equaled!

Chore-Time invented the FLEX-AUGER® Coreless Auger Feed Delivery System in 1961. In the years since then, Chore-Time's FLEX-AUGER System has proven to be the most reliable and best system ever devised to deliver feed.

- Helps optimize feed conversion by keeping feed fresh and reducing waste.
- Choice of conveying rates for a wide variety of feeding applications.
- Fully enclosed system distributes feed accurately and economically.
- Moves feed up, down, on-the-level, or around corners.
- Low power requirements and low maintenance costs.
- System is easily installed in minimal space.
- Designed to be highly energy efficient, long-wearing and trouble-free.



- 10-year prorated warranty. (See Chore-Time's full written warranty for complete details.)
- Automatic controls and scales also available.

### FLEX-AUGER® System Specifications

	Model 75	Model HMC	Model 90 (Standard)	Model 90 (High Speed)	Model 90 (High Speed)	Model 108 (Standard)	Model 108 (High Speed)
Feed Delivery Rate per Minute*	50 pounds (20 kg)	50 pounds (20 kg)	100 pounds (45 kg)	120 pounds (55 kg)	170 pounds (75 kg)	220 pounds (100 kg)	250 pounds (110 kg)
Power Unit RPM	348	348	348	425 (60 Hz only)	584	348	425 (60 Hz only)
Outside Diameter of Tube	3 inches (75 mm)	3.5 inches (90 mm)	3.5 inches (90 mm)	3.5 inches (90 mm)	3.5 inches (90 mm)	Steel – 4.25 inches (108 mm) PVC – 4.5 inches (115 mm)	Steel – 4.25 inches (108 mm) PVC – 4.5 inches (115 mm)
Corner Radius	5 feet (1.5 meters)	5 feet (1.5 meters)	5 feet (1.5 meters)	5 feet (1.5 meters)	5 feet (1.5 meters)	5 feet (1.5 meters)	5 feet (1.5 meters)
Recommended Motor at Maximum Length	1 HP	1 HP	1 HP	1 HP	1.5 HP	1.5 HP	2 HP
Maximum Length	200 feet (60 m)	150 feet (45 m)	150 feet (45 m)	120 feet (35 m)	120 feet (35 m)	150 feet (45 m)	150 feet (45 m)
Standard Extension**	245 feet (75 m)	185 feet (55 m)	185 feet (55 m)	150 feet (45 m)	N/A	185 feet (55 m)	185 feet (55 m)
Typical Applications	Broiler and turkey production or hog grow and finish houses	Dairy cattle feeding or large particle feeds	Broiler, breeder, turkey or layer houses; or large hog buildings	Broiler, breeder, turkey or layer houses; or large hog buildings	Broiler breeder houses only	Broiler, breeder or layer houses; bin filling, grain moving or stationary mills	Breeder or layer houses; bin filling, grain moving or stationary mills

\*Feed delivery rate calculated at standard 40 pounds of feed per cubic foot (640 kg per cubic meter).

\*\*Standard extensions use extension boot at motor end of first auger, plus additional tube, auger and motor.

NOTE: Where extra feed storage or dual rations are required, use Chore-Time's straight-through tandem system, or 30-degree two-motor tandem system. Tandem systems are available for Models 75, 90, HMC, and 108. For each straight-through tandem system (Model 75, HMC, 90 and 108), decrease maximum line length for each power unit by 50 feet (15 m). For Model 90 three-bin, straight-through systems, line length should also be decreased by 50 feet (15 m).

# FLEX-AUGER® System Components and Accessories Are Designed for Convenience and Worry-Free Performance

Highly energy-efficient, extremely long-wearing and trouble-free – that's how FLEX-AUGER Systems are known around the world.



Available in five capacities, Chore-Time's FLEX-AUGER System features a high-tensile strength spring-like steel auger and specially-compounded ultraviolet-and wear-resistant PVC tubing.



Curved PVC elbows permit Chore-Time's FLEX-AUGER® to move feed up, down, or around corners. Thicker PVC at the bottom of the curved tubing provides a long-lasting wear area.

## FLEX-AUGER® Components are Made to Work. Built to Last.®



The power unit features a unique, proven gearhead. The control unit includes a red translucent polycarbonate body and a nearly-clear, side-draw polypropylene funnel.



Plastic outlet drop is easy to install with several mounting options.



Upper boot transitions are available in clear or translucent red polycarbonate for easy feed visibility.

Chore-Time's Feed Scale aids in scheduling feed deliveries and provides real-time data regarding feed inventory.




## Chore-Time's mechanical and electronic switches provide reliable feed sensing.



*The mechanical Hopper Level Control (a) is used to maintain the feed level in the hoppers for continuous feed supply.*



*The electronic SENSOR PLUS™ Hopper Level Control (b) and SENSOR PLUS™ Drop Tube Switch (c) include a heater for greater switch reliability and adjust automatically to changes in feed type. A built-in programmable delay prevents short-cycling.*

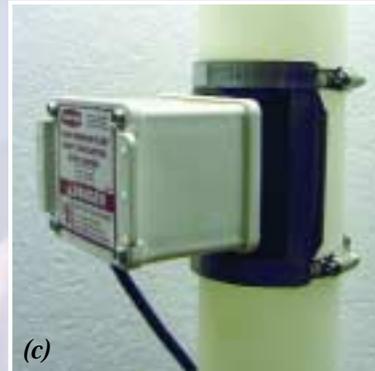

**CHORE-TIME**®


## Chore-Time offers a variety of accurate, reliable, easy-to-use controls from more advanced multi-function units to basic, single-function controls.



*Chore-Time's AGRI-TIME® 4-Channel Time Clock can control up to eight events (feedings, waterings, etc.) with a start and run time for each.*



*Chore-Time's Auger Timer can be used to prevent the auger system from running longer than a pre-set time between 3 and 100 minutes. The timer prevents the system from running empty for long periods of time. For added protection, system requires a manual re-set after activation.*

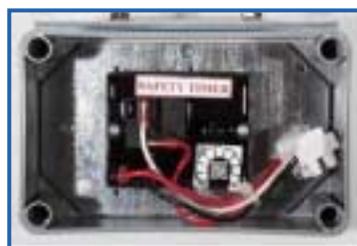

# Feed Bin Boot Slide Actuators for Straight-Out or 30-Degree Boots

Chore-Time's Boot Slide Actuator Systems help producers coordinate the use of feed bins so that birds don't miss a feeding. Whether you choose an automatic or a manual boot slide actuator, you get easy operation, a reliable design, and simple, trouble-free operation.




*Automatic Boot Slide Actuator System*

Chore-Time's Automatic Boot Slide Actuator System is designed to aid producers in managing feed storage on either a single straight-through or twin straight-through tandem feed bin systems.

- The operator uses the system's control panel to designate which feed bin will empty first.
- After that bin has emptied, the system's control panel automatically opens the boot shut-off slide on the second feed bin while closing the boot slide on the empty bin.
- On a twin straight-through tandem bin system, two controls are used to operate the four boot slides involved.
- The control panel's indicator lights show the position of each boot slide.

*FLEX-AUGER®  
Powered Slide  
Control*

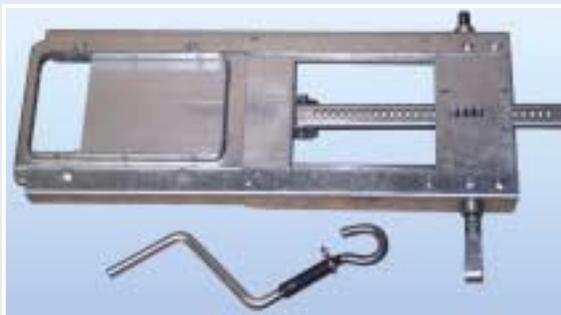

*Manual Boot Slide Actuator  
(Note: Handle has been shortened for photo purposes.)*

The Manual Boot Slide Actuator from Chore-Time helps producers easily open and close the feed bin boot slide without having to physically crawl under, around, or through the feed bin's leg and hopper support bracing system.

- Telescoping handle extends from 5 to 8 ft. (1.5 to 2.5 m) to allow actuator to be operated from outside the feed bin's leg and brace area.
- Easy-to-operate rack and pinion design quickly opens or closes boot slides in only 2-1/8 turns.
- Opener can be installed for either right- or left-hand operation.
- Single and twin-boot versions available.

## Warranty and Service

All Chore-Time FLEX-AUGER® Systems and Accessories are backed by a generous warranty and by a worldwide network of trained technical service and distributor professionals. For the distributor nearest you, call the Chore-Time Customer Service Department at 574-658-4101 or e-mail [poultry@choretime.com](mailto:poultry@choretime.com).



**Chore-Time Poultry Production Systems**  
A Division of CTB, Inc. • Milford, Indiana  
Phone (574) 658-4101 • Fax (574) 658-4171  
E-Mail Address: [poultry@choretime.com](mailto:poultry@choretime.com)  
Internet: [www.choretime.com](http://www.choretime.com)